



RICAMBI BLINDSTITCH US 718 – 99BL



NEEDLE DRIVE GROUP

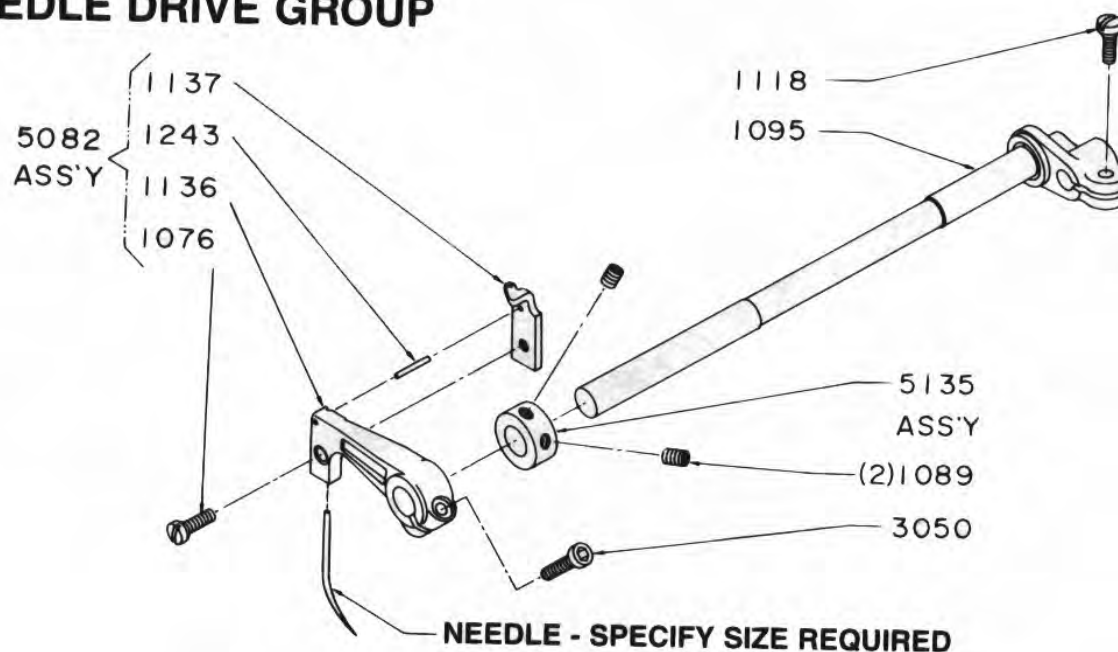

FEED DRIVE GROUP

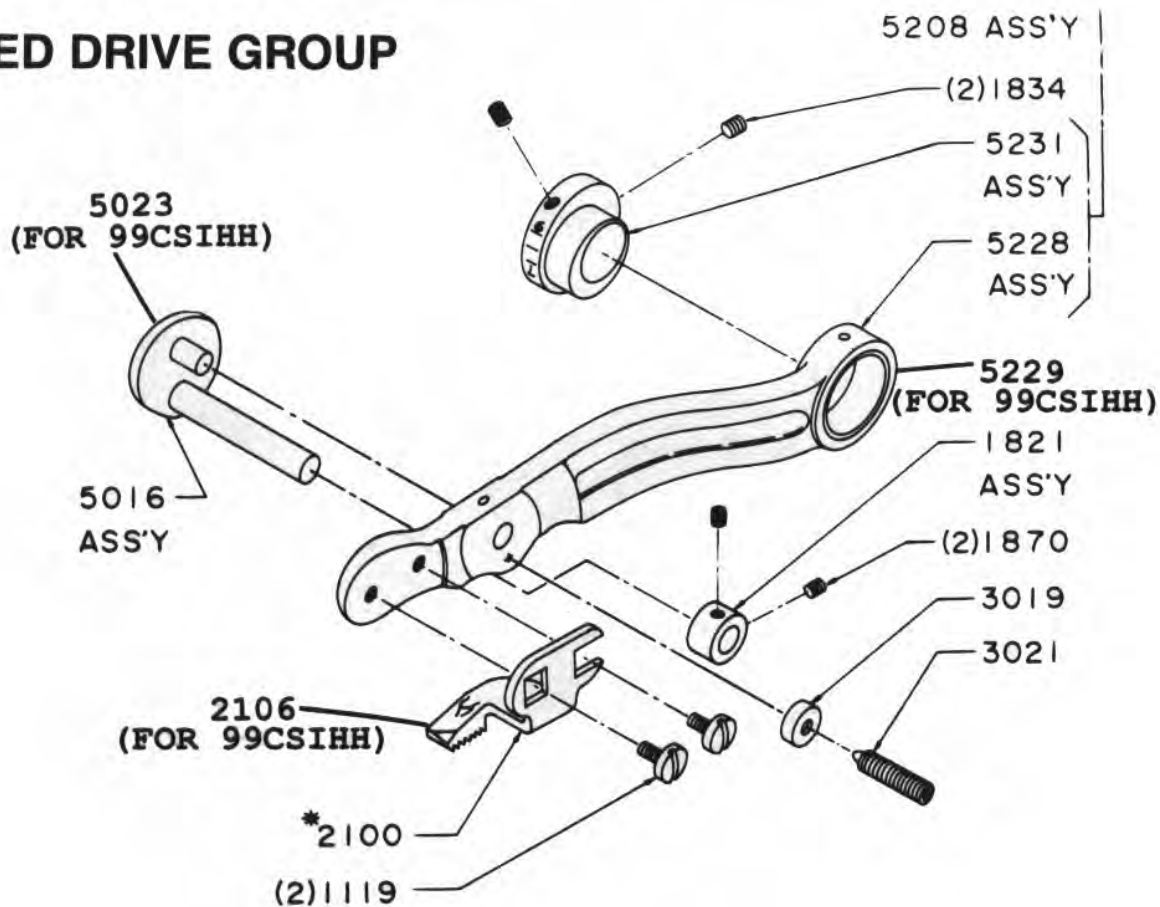


RICAMBI BLINDSTITCH US 718 – 99BL

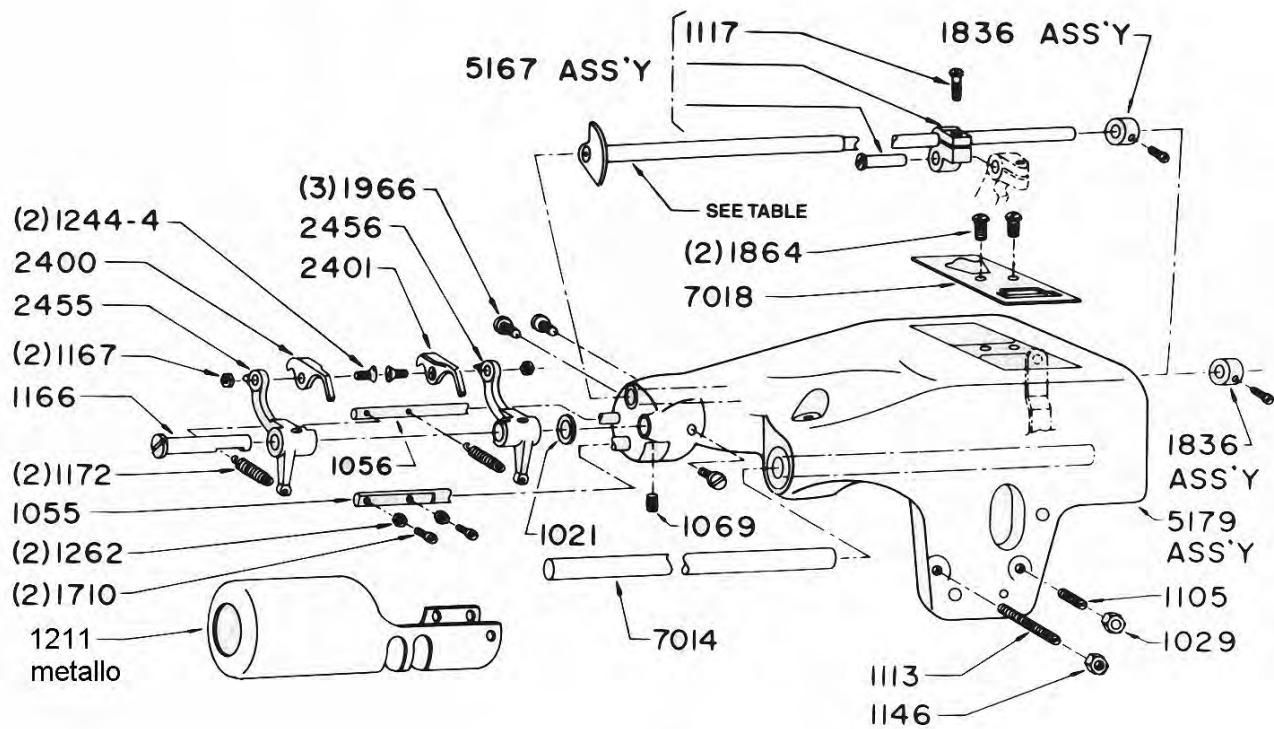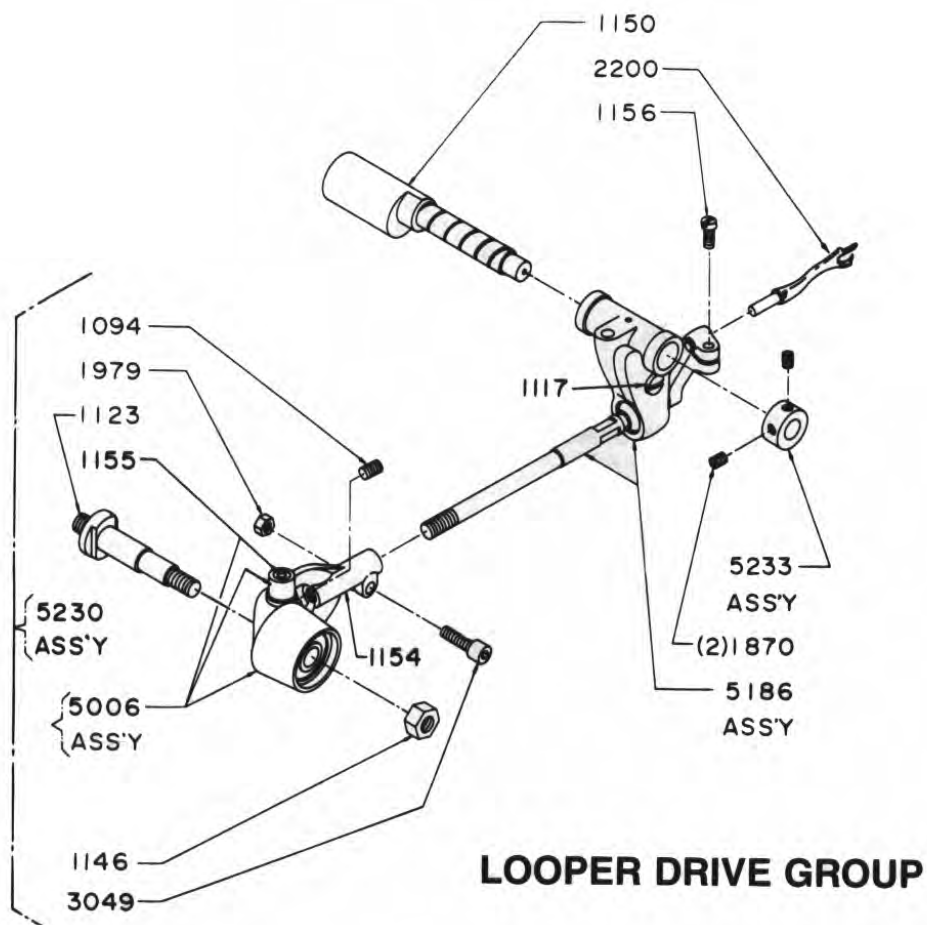

RICAMBI BLINDSTITCH US 718 – 99BL

PRESSER-FOOT ASSEMBLY GROUP I Partial and Complete Assembly – See table above

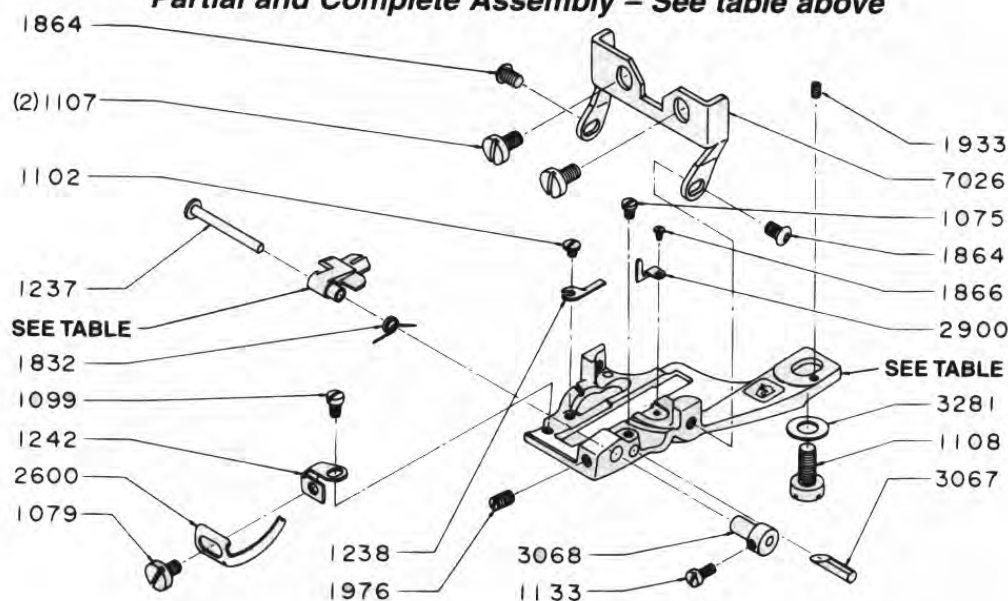


DETTAGLIO RICAMBI PER UNITA' PASSANTI US 99BL

Ref. No.	Description	Part Number	Ref. No.	Description	Part Number
1.	Screw for 200 & 224	.203-A1	40.	Upper Knife Right	.1348
2.	Retainer Plate (Feed Bar)	.201-AZ	41.	Upper Knife Left	.1349
3.	Spring Tension Feed Bar	.201A	42.	Knife Carrier Support Right	.210RS
4.	Rear Top Feed Bracket	.200	43.	Screw for 225 & 210RS	.214SS
5.	Top Feed Bracket Screw	.1101	44.	Hex Head Cap for 210RS	.207ANS
6.	Shoulder Screw for 200 & 201	.200-2A		& 207ANN	.207ANSH
7.	Nut (Top Feed & Front Feed Screws)	.201-IN	45.	Knife Carrier Support Left	.210LS
8.	Front Feed Screw Set	.201-IS	46.	Screw for 210-LS & 212-C	.212-2S
9.	Pan Head Screw (Top Feed Bracket)	.201-S	47.	Washer for 221	.1053
10.	Front Top Feed Bracket	.201	48.	Knife Spring	.221
11.	Front Top Feed Mounting Stud	.202-1	49.	Side Clamp	.212-C
12.	Screw - Mounting (Specify Size)	.217-IN	50.	Screw for 210LS	.210-RS-1
13.	Feed Brace	.202-B	51.	Secondary Stud Knife Block	.219-B
14.	Tape Guide (Filler-Buckram)	.202BSN	52.	Shaft, Knife Block	.219-A
15.	Hex Nut 9-40 for 216AR & 202-1	.1701	53.	Screw eye Stud	.206-INE
16.	Carrier, Operator Lever	.215 Unit	54.	Washer for 207ANSH	.207ANW
17.	Groove Pin for 230	.1663	55.	Folder Adjustable Bracket	.207-ANN
18.	10-32 Socket Set Screw for 215 Unit	.1814	56.	Adjustable Stud for 207ANN -207ANS Bk 207KN	.207 ANS
19.	10-32 Socket Head Cap Screw for 215 Unit & 210RS	.215-A2	57.	Knurled Adj. Nut for 207-ANS	.206-INE-1
20.	Top Feed (Specify Size) 5/16 - 3/8 - 7/16 - 1/2	.202A (Size)	58.	Rod End Shoulder Screws	.216-AR
21.	Screw Folder Mounting	.217H	59.	Feld Washer for 216-AR	.222A
22.	Folder (Specify Size) 5/16 - 3/8 - 7/16 - 1/2 also Opening ABC	.207 (Size)	60.	Rod End Bearing R.H. THD	.216B
23.	Bushing for 207BNF	.207-B-1	61.	Knife Shaft Lever	.214-C
24.	Folder Adjustable Block	.207BNF	62.	Set Screw for P/N 214-C	.1331
25.	Eye Screw for 207BNF	.207BFS	63.	Tie Rod Nut for 216-B	.1008
26.	Spring for Folder Block	.1171	64.	Tie Rod (Specify machine size)	.216
27.	Knife Clamp Right	.211-R	65.	Tie Rod Nut L.H. for 216-A	.216-ILN
28.	Knife Clamp Left	.211-L	66.	Rod End Bearing	.216-A
29.	Lower Knife Right	.1351	67.	Tie Rod Shield Unit	.217A-B Unit
30.	Lower Knife Left	.1352	68.	Screw for 217A-B 7NIT & 228	.228SNP
31.	Bushing for 206 Block	.206B	69.	Support Shim BLP Frame	.230-1
32.	Knife Block (Specify Size) 5/16 - 3/8 - 7/16 - 1/2	.206 (Size)	70.	Flat Washer Support Shim	.1054
33.	Socket Cap Screw for 206 Knife Block	.231	71.	Screw BLP Frame Mounting	.10014
34.	Socket Set Screw for 206 Knife Block	.206SS	72.	Main Frame	.225
35.	Knife Clamp Screw (Specify Size) for 5/16 - 3/8	.211-1	73.	Chip Guard Right	.224
36.	Screw for 210 NR & 210 NL	.216-S1	74.	Support Plate for 225	.230
37.	Screw Upper Knife Clamp	.209-1	75.	Upper Chip Guard Right (Specify size) 5/16" & 3/8", 7/16", 1/2"	.204ANS
38.	Knife Carrier Right	.210-NR	76.	I.D. Plate Trimmer Main Frame 200-ID	.200-ID
39.	Knife Carrier Left	.210-NL	77.	Lower Guard Plate Right	.228
			78.	Lower Guard Plate Left	.203A
			79.	Screw Mounting 203A	.216-S
			80.	Lower Guard Plate Left 227, 227-1	.227
			81.	Screw Work Plate	.203NES
			82.	Work Plate Shield (Specify size) 5/16", 3/8", 7/16", 1/2"	.204NE Size
			83.	Work Plate	.203NEB
			84.	Oil Cup	.232

RICAMBI BLINDSTITCH US 99BL

PARTS FOR U.S. AUTOMATIC BELT UNIT

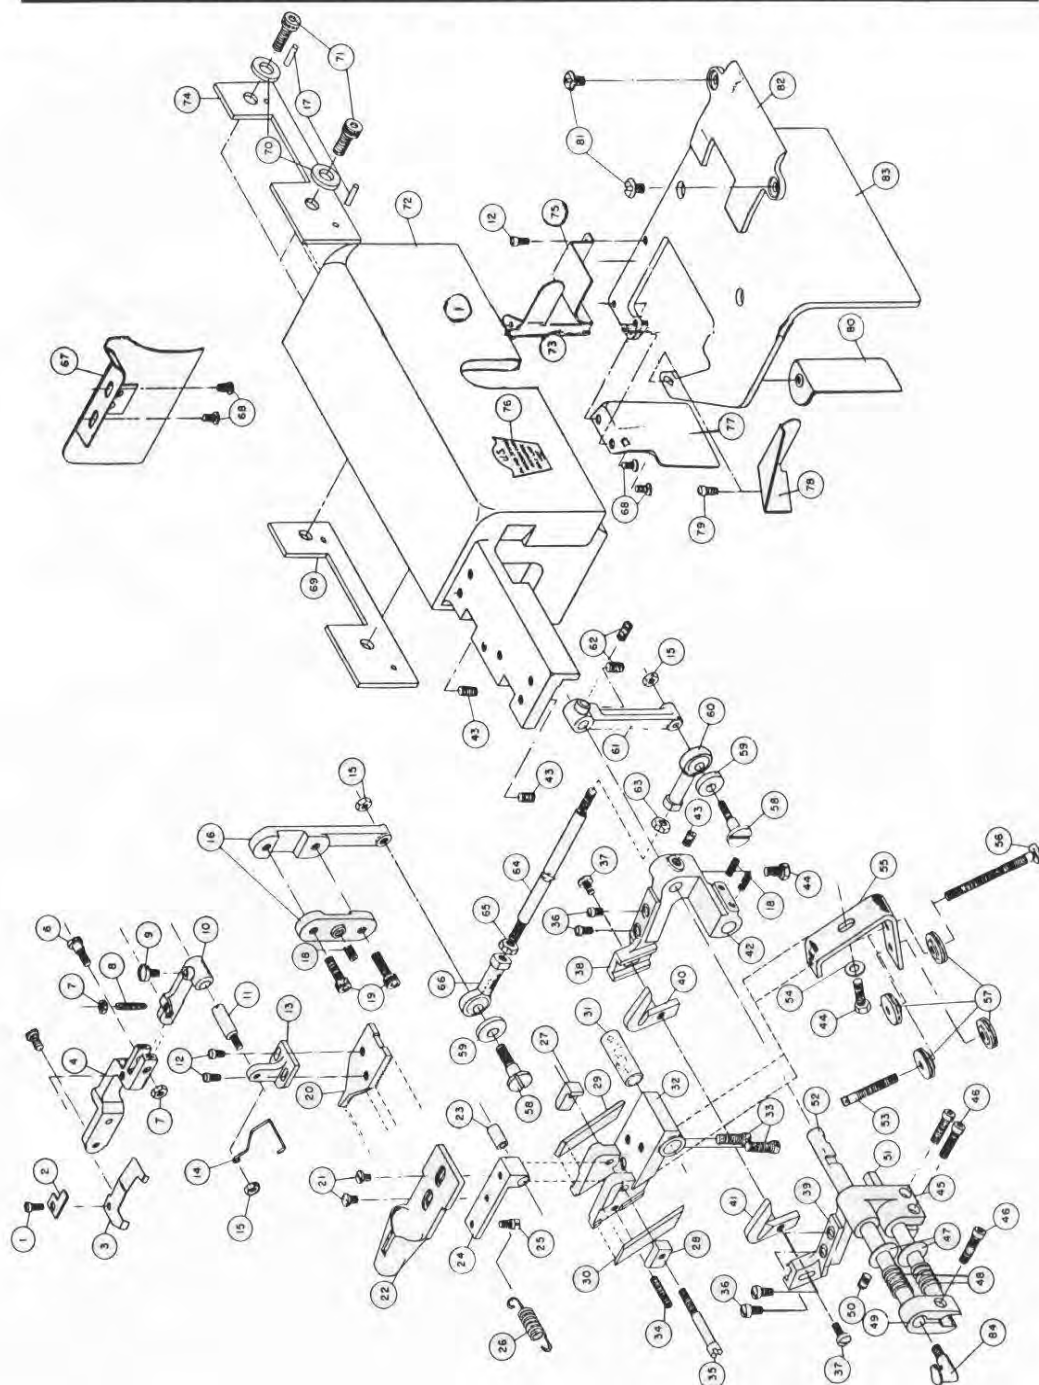

COLTELLI BLINDSTITCH



A3239M
US2200
22 (# 2200)
US-Rim 1099BL

A3234
208L-1352



A3233
208R-1351



A3235
209R-1348



A3236
209L-1349

A8042 piegatore per passanti (22) medio/leggero/pesante , passante finito 3/8